

Rotisserie Oven

MODEL VG

OPERATION MANUAL

Serial Numbers 115493 and Higher



Warranty Information

LIMITED ONE YEAR WARRANTY

BKI (The "Company") warrants to the original purchaser/user, that at time of shipment from the Company factory, this equipment will be free from defect in materials and workmanship. Written notice of a claim under this Warranty must be given within **ONE YEAR AND THREE MONTHS** from date of shipment from the factory. Defective conditions caused by abnormal use or misuse, lack of maintenance, damage by third parties, alterations by unauthorized personnel, acts of God, failure to follow installation instructions or any other events beyond the control of the company will **NOT** be covered under Warranty. The obligation of the Company under this Warranty shall be limited to repairing or replacing (at the option of the company) any part which is defective in reasonable opinion of the Company. The user will have the responsibility and expense of removing and returning the defective part to the Company as well as the cost of reinstalling the replacement or repaired part.

IN NO EVENT SHALL THE COMPANY BE LIABLE FOR LOSS OF USE, LOSS OF REVENUE OR LOSS OF PRODUCT OR PROFIT OR FOR INDIRECT OR CONSEQUENTIAL DAMAGES INCLUDING BUT NOT LIMITED TO, FOOD SPOILAGE OR PRODUCT LOSS. WARRANTY DOES NOT COVER GLASS BREAKAGE. THE ABOVE WARRANTY IS EXCLUSIVE AND ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, ARE EXCLUDED INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY SHALL APPLY ONLY WITHIN THE CONTINENTAL UNITED STATES, ITS TERRITORIES, AND POSSESSIONS AND IN CANADA.

LIMITED NINETY DAY LABOR WARRANTY

All labor necessary to repair or replace factory defective parts will be performed, without charge, to the end user, by service personnel of a **BKI** Authorized Distributor during the first ninety days after the date of installation of the new equipment.

Replacement parts: Any appliance replacement part, except lamps and fuses, which proves to be defective in material or workmanship within 90 days from date of original installation will be repaired or replaced without charge F.O.B. Factory, Simpsonville, S.C. or F.O.B. authorized distributor.

Table of Contents

Table of Contents	1
Introduction	2
Safety Precautions.....	2
Safety Signs and Messages.....	2
Safe Work Practices.....	3
Safety Labels.....	4
Health And Sanitation Practices.....	5
Food Handling.....	5
Storage Of Raw Meats.....	5
Coding Cooked Foods.....	5
Storage Of Prepared Foods.....	5
Operation	6
Controls and Indicators.....	6
Controller Operation	8
Programming the Controller.....	8
Selecting a Program.....	11
Pre-Heating the Oven.....	11
Cooking.....	12
Programming Examples.....	13
Locking the Controller.....	15
Maintenance	16
Scheduled Maintenance.....	16
Oven Cleaning.....	16
Troubleshooting.....	17
Notes	19

Introduction

Your **BKI** VG is a computer controlled rotisserie oven. It utilizes a revolving mechanism and heating coils that ensure even product cooking. A touch pad control panel and switches are provided to allow for quick setup and operation. Removable components allow for easy maintenance and cleaning of the VG.

The **BKI** name and trademark on this unit assures you of the finest in design and engineering -- that it has been built with care and dedication -- using the best materials available. Attention to the operating instructions regarding proper installation, operation, and maintenance will result in long lasting dependability to ensure the highest profitable return on your investment.

NOTICE

PLEASE READ THIS ENTIRE MANUAL BEFORE OPERATING THE UNIT. If you have any questions, please contact your **BKI** Distributor. If they are unable to answer your questions, contact the **BKI** Technical Service Department, toll free: 1-800-927-6887. Outside the U.S., call 1-864-963-3471.

Safety Precautions

Always follow recommended safety precautions listed in this manual. Below is the safety alert symbol. When you see this symbol on your equipment, be alert to the potential for personal injury or property damage.



Safety Signs and Messages

The following Safety signs and messages are placed in this manual to provide instructions and identify specific areas where potential hazards exist and special precautions should be taken. Know and understand the meaning of these instructions, signs, and messages. Damage to the equipment, death or serious injury to you or other persons may result if these messages are not followed.

DANGER

This message indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

This message indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.


CAUTION

This message indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

NOTICE

This message is used when special information, instructions or identification are required relating to procedures, equipment, tools, capacities and other special data.

Safe Work Practices

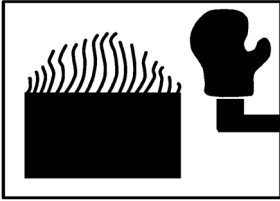


Wear Safe Clothing Appropriate To Your Job

Always wear your insulated mitts when handling hot racks or touch any hot metal surface. If you lose or damage your mitts, you can buy new ones at your local restaurant equipment supply store or from your local **BKI** Distributor.

Always wear non-skid shoes when working around the oven or any other equipment.


Never wear loose clothing such as neckties or scarves while operating this equipment. Keep loose hair tied back or in a hair net while operating this equipment.

Always wear appropriate personal protection equipment during the cleaning process to guard against possible injury from hot cleaning solution.

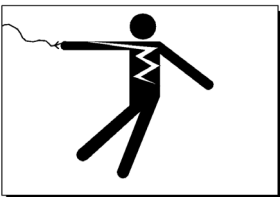

Beware of High Voltage

This equipment uses high voltage. Serious injury can occur if you or any untrained or unauthorized person installs, services, or repairs this equipment. Always Use an Authorized Service agent to Service Your Equipment.

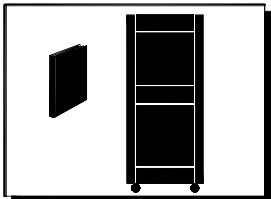

Keep this manual with the Equipment

This manual is an important part of your equipment. Always keep it near for easy access. If you need to replace this manual, contact:

BKI


Technical Services Department
 P.O. Box 80400
 Simpsonville, S.C. 29680-0400
 Or call toll free: 1-800-927-6887
 Outside the U.S., call 864-963-3471



Protect Children

Keep children away from this equipment. Children may not understand that this equipment is dangerous for them and others.

NEVER allow children to play near or operate your equipment.

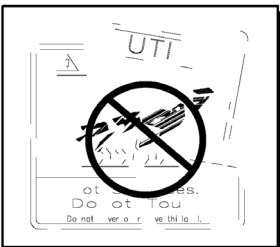


Keep Safety Labels Clean and in Good Condition

Do not remove or cover any safety labels on your equipment. Keep all safety labels clean and in good condition. Replace any damaged or missing safety labels. Refer to the Safety Labels section for illustration and location of safety labels on this unit. If you need a new safety label, obtain the number of the specific label illustrated on page 4, then contact:

BKI

Technical Services Department
 P.O. Box 80400
 Simpsonville, S.C. 29680-0400
 Or call toll free: 1-800-927-6887
 Outside the U.S., call 864-963-3471

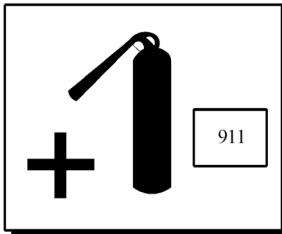


Be Prepared for Emergencies

Be prepared for fires, injuries, or other emergencies.

Keep a first aid kit and a fire extinguisher near the equipment. You must use a 40-pound Type BC fire extinguisher and keep it within 25 feet of your equipment.

Keep emergency numbers for doctors, ambulance services, hospitals, and the fire department near your telephone.

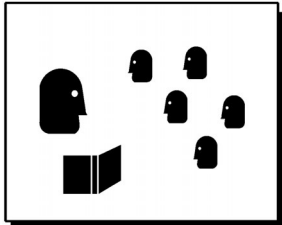


Know your responsibilities as an Employer



- Make certain your employees know how to operate the equipment.
- Make certain your employees are aware of the safety precautions on the equipment and in this manual.
- Make certain that you have thoroughly trained your employees about operating the equipment safely.
- Make certain the equipment is in proper working condition. If you make unauthorized modifications to the equipment, you will reduce the function and safety of the equipment.

Safety Labels


N0531

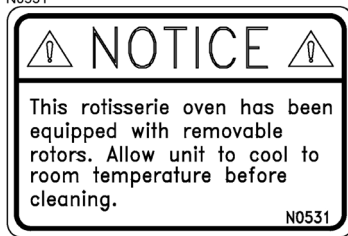

N0166

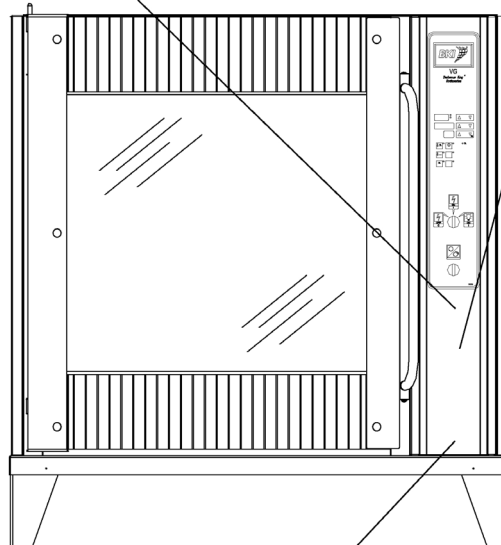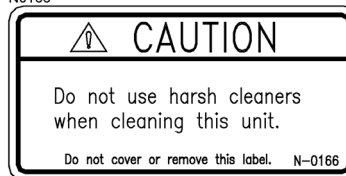

N0202

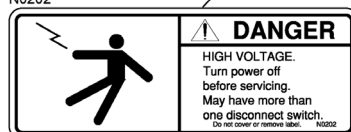

Health And Sanitation Practices

BKI Rotisserie Ovens are manufactured to comply with health regulations and are tested and certified to NSF standards. You must operate the equipment properly, using only quality products and use meat thermometers to insure meats are thoroughly cooked.

Food Handling

- Wash hands thoroughly in warm, soapy water after handling raw poultry or meats.
- Clean and sanitize all utensils and surfaces that have been in contact with raw products. Clean and sanitize the meat forks or baskets between cooking.
- **Never** place cooked meats on the same surfaces used to prepare raw meats, unless the area has been thoroughly cleaned and sanitized.

Storage Of Raw Meats

- Designate an area or shelf strictly for the storage of all raw meats to be used in the rotisserie.
- Raw product must always be stored at temperatures below 38° F. (3° C.).
- **Never** store or mix raw foods above cooked foods, as this is a health hazard. The drippings from raw foods contaminate cooked or processed foods.
- All chicken and chicken parts to be stored overnight must be thoroughly iced down and refrigerated.

Coding Cooked Foods

All products cooked during the day should be sold the same day.

NOTE: It is not the intent of the rotisserie program to have unsold merchandise at the end of the cooking day. Follow your company's procedures for the handling of any leftover product.


Storage Of Prepared Foods










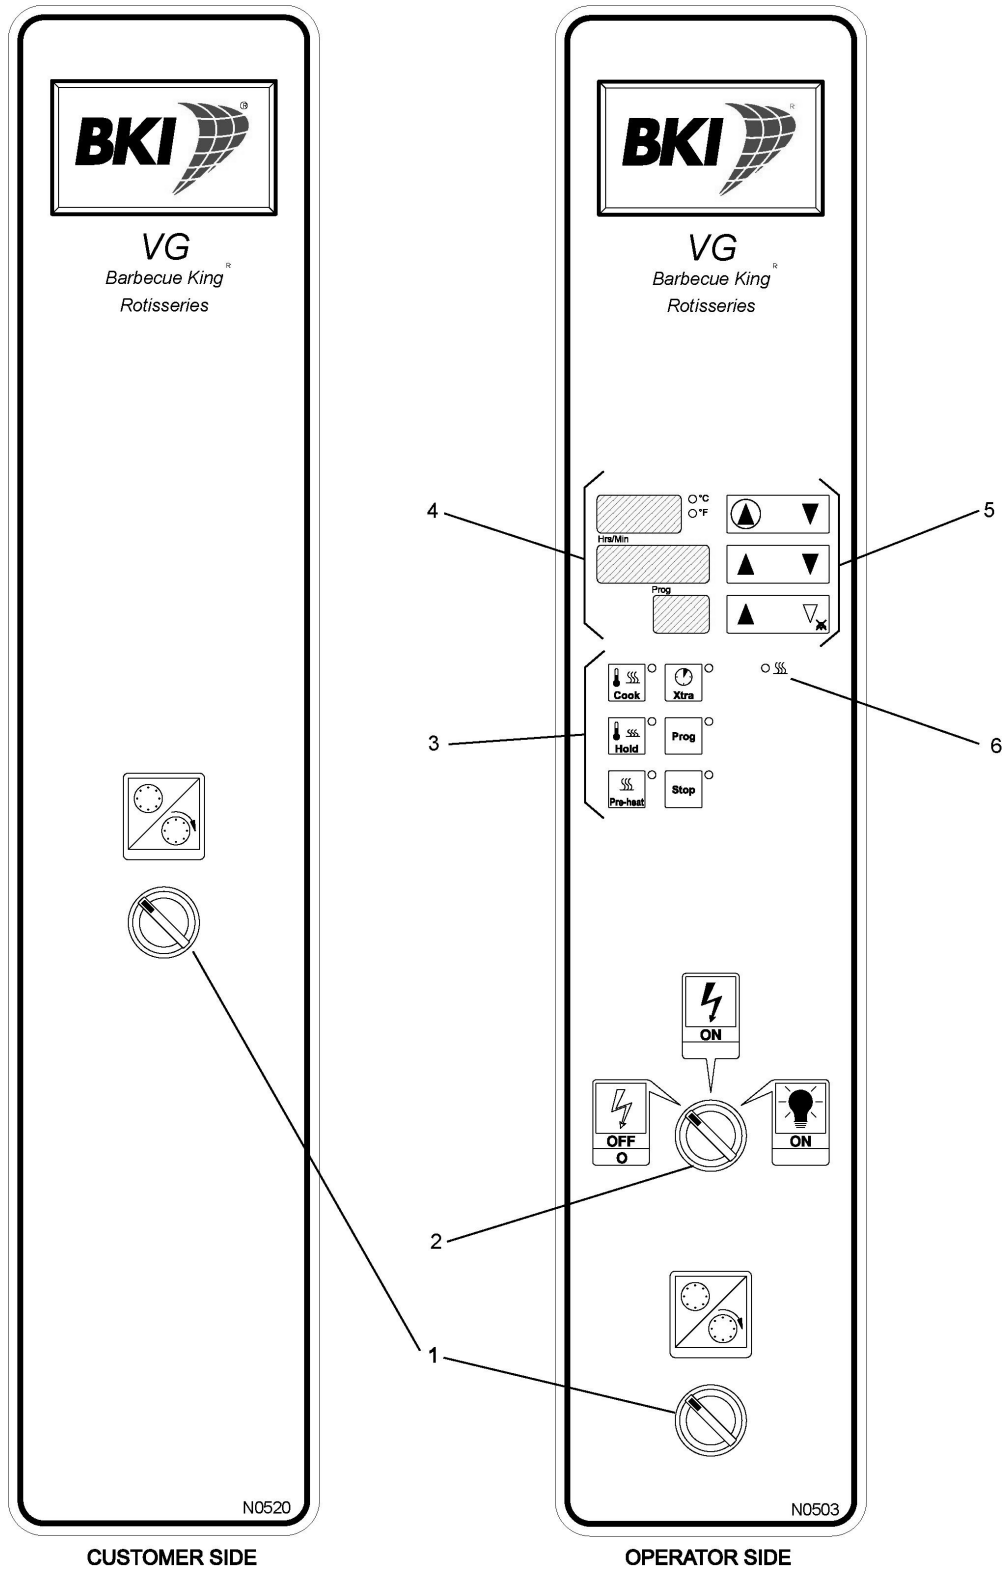

- Cold foods should be kept at or below 38° F. (3° C.).
- Hot foods must be maintained to meet local health codes, usually a minimum 145° F. (63° C.).

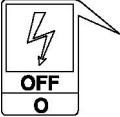

 



 
Operation

Controls and Indicators

Refer to the figure and table below for an explanation of the oven's controls and indicators.



Item #	Description	Function
1	Rotor Switch	 When the switch is placed in this position, the rotor motor is off.  When the switch is placed in this position, the rotor motor is on and the rotor system turns.
2	Operator Switch	 When the switch is placed in the this position, power is removed from the oven.  When the switch is placed in this position, power is supplied to the oven.  When the switch is placed in this position, power is supplied to the oven and lights inside the oven come on.
3	Controller Function Keys	Pressing a key activates it's associated function and illuminates the light next to it.  Starts the cook cycle of the program number selected. While in the programming mode, the Cook button accesses <i>Stage-2</i> cook time and temperature settings.  Starts the hold cycle of the program number shown in the display area. While in the programming mode, the Hold button accesses the hold time and temperature settings.  Starts the oven pre-heating. While in the programming mode, the Pre-heat button accesses <i>Stage 1</i> cook time and temperature settings.  Each press of the Xtra button adds five minutes to the programmed cook time. Press this button up to eleven times for an additional 55 minutes of cook time. The oven will be maintained at the last program temperature.  Enters the 'programming mode' allowing the operator to create presets for Programs 1-15.  A quick press of the Stop button 'pauses' the controller during a Pre-heat or Cook/Hold cycle. Press and hold the Stop button to end a Pre-heat or Cook/Hold cycle.

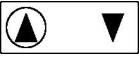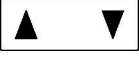Item #	Description	Function
4	Controller Display Area	<p>All programming functions and Cook/Hold cycles are shown in the Display area.</p>  <p>This display shows temperature. One of two LED's beside this display will light to indicate which temperature scale is being used (Celsius or Fahrenheit).</p>  <p>This display shows cook time.</p>  <p>This display shows the selected program number.</p>
5	Controller Navigation Keys	 <p>These keys allow the operator to increase or decrease temperatures of the presets. The circled key, if pressed during a Cook/Hold cycle, displays actual oven temperature.</p>  <p>These keys allow the operator to increase or decrease the cook times.</p>  <p>These keys allow the operator to scroll through the 15 Cook/Hold programs. The down arrow key, when pressed, cancels the 'buzzer' at the end of a Pre-heat, Cook, or Hold cycle.</p>
6	Heat Indicator	 <p>Indicates when the heat is on.</p>

Controller Operation

The VG Controller has 15 programmable cook programs. Each program or preset contains a multistage Cook option and a Hold feature. The multi-stage cook option is made up of two parts: Stage- 1 and Stage-2. The Cook options and Hold feature of each program has an adjustable cook time and temperature. The two-stage cook option may also be used for a 'delayed start' or for a 'cool down' period.

The features and flexibility of this controller allow the operator to create programs based on a recipe or the cooking needs of popular product lines and will help guarantee consistent results. The controller is divided into three parts: the Display area, the Navigation keys, and the Function keys. There is also a light to indicate the 'heat' is on (located below the Navigation keys).


Programming the Controller

Preparation


- Determine the product to be cooked. Also determine if the two-stage cook feature is needed. This information must be determined *before* the programming process begins.
- Establish a cook time and temperature for the product. If desired, decide on a Hold time and temperature. Remember, the **Xtra** button only works if a Hold temperature has been set and the oven temperature at the end of the Cook cycle is higher than the programmed Hold temperature.
NOTE: When programming the Hold temperature, set the temperature 20° more for Fahrenheit, 10° more for Celsius, than the desired internal temperature. (e.g. Desired internal temp: 150° F — set the Hold for 170° F or 65° C – set the Hold for 75° C).
- Turn power on. When the controller comes on the lights flash, pause for a moment, and then show the oven temperature and the word "OFF" in the time display.

Setting a Two-Stage Program


1. Press and hold the **PROG** button. The lights next to the **Prog** and **Cook** buttons will illuminate. This indicates that the controller is now in the programming mode.
2. Use the Navigation keys to scroll through the program numbers and to increase or decrease the Cook times and temperatures for each program number. While in the programming mode, the display shows a cook temperature, a cook time, and the program number. As long as the light by the **Cook** button is illuminated, the information displayed is for Stage-2 as depicted in the example below. Use the Navigation keys to change the settings if desired.

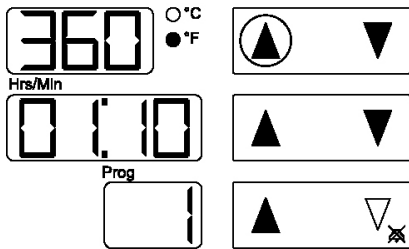


This example display shows the Stage 2 settings of Program 1 set at 360° F with a 1 Hr. 10 Min. cook time.

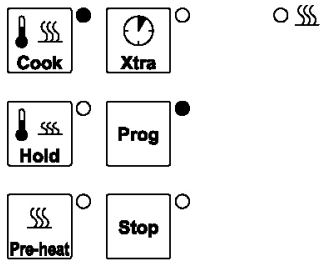

3. Press the **Pre-heat** button. The light by the Cook button disappears and the light by the Pre-heat button appears. The new set of information displayed is for Stage-1, depicted in the example below. Use the Navigation keys to change the settings if desired.

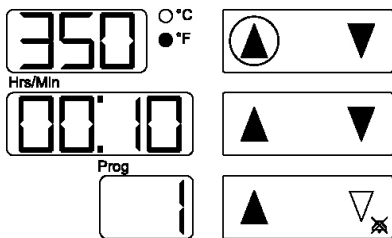

This example display shows the Stage 1 settings of Program 1 set at 350° F with a 10 Min. cook time.

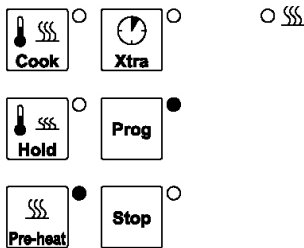

4. To exit the programming mode either press and hold the **Prog** button and wait for the word "OFF" to appear in the time display, or when finished programming, wait 8 seconds (do not touch any key) and the display will return to "OFF".

Setting a Single-Stage Program

To simplify the Cooking process, the **Stage-1** Cook option may be by-passed.


1. Press and hold the **PROG** button. The lights next to the **Prog** and **Cook** buttons will illuminate. This indicates that the controller is now in the programming mode.
2. Use the Navigation keys to scroll to the desired program number.
3. Press the **Pre-heat** button. The settings for Stage-1 appear in the display area. Set the Cook temperature and Cook time to zero.
4. Press the **Cook** button. The settings for Stage-2 now appear in the display area. Set the desired Cook temperature and Cook time for the Cook cycle.

Important Note: This procedure only effects the settings for Stage-1 in the program number displayed; repeat the process as needed for the other program numbers.


5. To exit the programming mode either press and hold the **Prog** button and wait for the word “OFF” to appear in the time display, or when finished programming, wait 8 seconds (do not touch any key) and the display will return to “OFF”.

Setting a Hold Cycle

1. Press and hold the **PROG** button. The lights next to the **Prog** and **Cook** buttons will illuminate. This indicates that the controller is now in the programming mode.
2. Use the Navigation keys to scroll to the desired program number.
3. Press the **Hold** button. A temperature and time will appear in the displays as depicted in the example below.

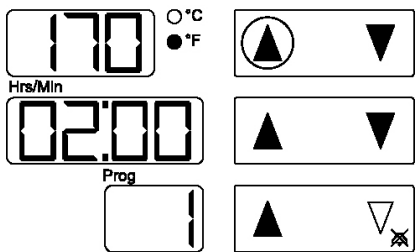

This example display shows the Hold settings of Program 1 set at 170° F with a 2 Hr. hold time.

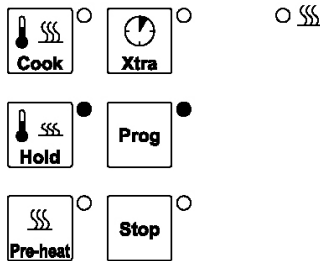

4. Use the Navigation keys to change the settings if desired. The Hold cycle is intended for the program number displayed only.
5. Remember to set the hold temperature 20° F (10° C) more than the desired internal temperature of the product during a Hold cycle.

Note: A **Hold** time and temperature must be set if the **Xtra** button will be used.

Saving the Program Settings


There are two ways to save the program settings. Press and hold the **Prog** button and wait for the word OFF to appear in the time display, or when finished programming, wait 8 seconds (do not touch any key) and the display will return to "OFF". The new settings are automatically saved and, if there were no changes, the original program is retained.

Selecting a Program


1. Press and hold the **Prog** button. The light next to the button will illuminate along with the light next to the **Cook** button.
2. Release the button.
3. Use the Navigation keys next to the program number display and scroll up or down to locate the program number desired. When scrolling through the programs, the Stage-2 settings for each program number will be shown in the display area.
4. Once the desired program number is reached, release the Navigation key.
5. Wait 8 seconds or press and hold the **Prog** button. The controller will now use the newly selected program number and its settings.

Pre-Heating the Oven

1. Select a program number as documented in this manual. Wait for the word "OFF" to appear in the display area.
2. Press the **Pre-heat** button. The 'heat-on' light will illuminate and the cooking fans will come on. In the display area, the temperature display will show real-time temperature changes in the oven and the time display will show "On" as depicted in the example below.

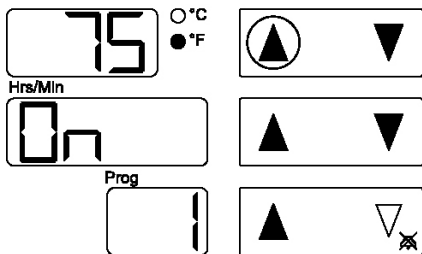

This example display shows the Preheat cycle for Program 1 with a starting oven temperature of 75° F

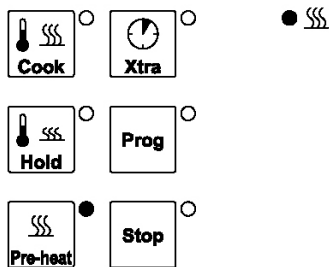

3. Once the oven reaches the programmed temperature a buzzer will sound for 20 seconds. To turn off the buzzer press the white down arrow. The controller will continue to maintain the programmed temperature in the oven for up to 6 hours.

Remember that the Pre-heat function of the controller will satisfy Stage-1 first. For example, if Stage-1 has 85°F and Stage-2 has 350°F programmed, Pre-heat will bring the oven to 85°F and then sound the alarm. If Stage-1 has a zero temperature/time programmed, the controller will bypass Stage-1 and begin to heat the oven to what is programmed in Stage-2.


Avoid pressing the **Stop** button unless it is necessary. When the **Stop** button is pressed, the Preheat function goes into 'pause' (the light next to the button will flash), the heating elements turn off, and the cooking fans stop after 20 seconds. At this point the oven is not pre-heating. To restart the Pre-heat function, simply press the **Pre-heat** button again.

Cooking


1. Place the rotor switch in the on position during pre-heat and cook functions. This prevents the rotor disks (drums) from warping.
2. Select a program and Pre-heat the oven as documented in this manual.
3. When the buzzer sounds to indicate that the oven has reached the programmed temperature, press the white down arrow to stop the buzzer and then press the **Stop** button. This will 'pause' the oven (heat is off, fans turn off automatically after 20 seconds). Wait until the fans are off before opening the door to load the oven.
4. Load the product into the machine.
5. Use the rotor switch on the front panel to operate the rotors during loading

NOTE: Do not forget to restart the rotor after loading as product under the air outlet will burn very quickly.

6. Close the Door.
7. Press the Cook button. The temperature display will show the programmed cook temperature. The controller will automatically change between the Stage-1 and Stage-2 cook sections when the clock reaches the proper time. The time display will show the total cook time (Stage-1 + Stage-2).
8. To see the actual temperature at the controller's temperature probe, press and release the arrow with the red circle around it; it will briefly show the actual temperature at the probe location in the oven and then switch back to the programmed temperature.
9. At the end of the Cook cycle, the controller will automatically go into the Hold cycle (if programmed) and begin counting up to the specified Hold time.
10. The product is now ready to be checked for internal temperature.
 - 'Pause' the machine by pressing the **Stop** button and check the product. If more time is needed, press the Xtra button. Each press of the Xtra button adds another 5 minutes to the previous Cook cycle (up to 55 minutes).
 - If the product is finished and ready for Hold, press the **Hold** button. This will continue the Hold cycle that was started immediately following the end of the cook cycle.

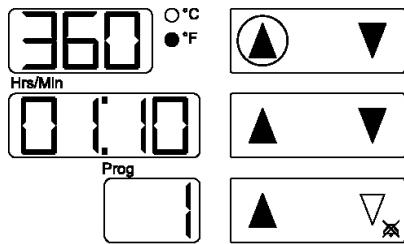

The example display shows the controller during a Cook cycle: Program 1 set at 360° F with a cook time of 1 hr., 10 min. The colon in the time display will flash throughout the Cook cycle and the 'heat on' indicator will cycle with the heat.

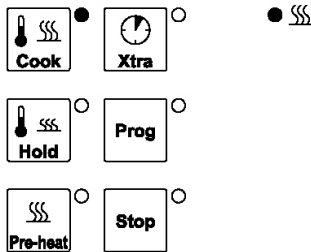

Programming Examples

Example Program 1

This program will defeat Stage-1 cooking and only use the Stage-2 cooking and the Hold functions. Total cook time is 1 hour, 10 minutes. Total Hold time is 2 hours.

Stage-1: temperature set to "0°F", time set to 0-hrs 00-mins.	Stage-2: temperature set to "360°F", time set to 1-hr 10-mins.	Hold: temperature set to "170° F", time set to 2-hrs.
<p>Stage-1 display shows '0' with °C and °F indicators, '00:00' with 'Hrs/Min' above it, and 'Prog 1'. The 'Cook' button is active (flame icon lit), and the 'Hold' button is active (flame icon lit).</p>	<p>Stage-2 display shows '360' with °C and °F indicators, '01:10' with 'Hrs/Min' above it, and 'Prog 1'. The 'Cook' button is active (flame icon lit), and the 'Hold' button is active (flame icon lit).</p>	<p>Hold display shows '170' with °C and °F indicators, '02:00' with 'Hrs/Min' above it, and 'Prog 1'. The 'Cook' button is active (flame icon lit), and the 'Hold' button is active (flame icon lit).</p>

Example Program 2

This program cooks the product at 350°F for 25 minutes and then cooks at 150°F for 20 minutes. Total cook time is 45 minutes. Since the Hold program is 0°F and 0 minutes, the Hold function is defeated and the Xtra button will not work.

Stage-1: temperature set to "350°F", time set to 25-mins.	Stage-2: temperature set to "150°F", time set to 20-mins.	Hold: temperature set to "0°F", time set to 0-hr 0-mins.

Example Program 3

This is an example of a delayed start option. The program 'Holds' the product at room temperature for 15 minutes and then Cooks at 350°F for 20 minutes. Total time is 35 minutes. Because Stage-1 has no temperature setting, there is no need to pre-heat the oven. Since the Hold program is 0°F and 0 minutes, the hold function is defeated and the Xtra button will not work. Reverse Stage-1 and 2 for an example of a 'cool down' option.

Stage-1: temperature set to "0°F", time set to 15-mins.	Stage-2: temperature set to "350°F", time set to 20-mins.	Hold: temperature set to "0°F", time set to 0-hr 0-mins.

Example Program 4

Stage-1: temperature set to "250°F", time set to 25-mins.	Stage-2: temperature set to "150°F", time set to 20-mins.	Hold: temperature set to "0°F", time set to 0-hr 0-mins.

Locking the Controller

In some cases the Chefs, shift supervisors, or managers may want to pre-set the controller programs and then lock the settings into place. Once locked, the operator may change the program number (as described earlier) but cannot change Cook times and temperatures or Hold features within each program number.

1. Press and hold down (together) the up and down arrows next to the temperature display. After 5 seconds, "P 1" will appear in the display. The operator now has access to the **Parameter Programming Function** of the controller (PPF).
2. Use the up arrow next to the display to scroll to "P 19".
3. At "P 19" press and hold the **Cook** button. The number "0" will appear in the display.
4. To lock the controller settings press the up arrow (next to the temperature display) while still holding down the **Cook** button. The "0" will change to a "1". Now the controller is locked. To unlock, use the down arrow (next to the temperature display) and change the "1" to a "0".
5. There are two ways to exit the **PPF**:
 - After locking or unlocking the controller, release the buttons. Wait 30 seconds and the controller will automatically exit the **PPF**, saving the changes.
 - When finished, press and hold down (together) the up and down arrows (next to the temperature display) for 5 seconds and the changes will be saved.



Changing other parameters may damage the unit and/or harm the operator.

All other parameters are factory set and should not be changed. If more information on parameter settings is needed, contact an authorized **BKI** representative.

Maintenance



Failure to comply with the maintenance below could result in a serious accident or equipment damage.



Failure to remove power from this unit before performing maintenance may cause severe electrical shock. This unit may have more than one disconnect switch.

Scheduled Maintenance

Use the following table to help manage scheduled maintenance activities.

Frequency	Performed By	Part	Activity
Daily	User	Oven	Clean the entire Oven.

Oven Cleaning

Cleaning is not only necessary for sanitary reasons, but will increase sales appeal and maximize operating efficiency.



Failure to remove power from this unit may cause severe electrical shock. This unit may have more than one disconnect switch.



Using abrasive cleaners may damage the cabinet finish. Use only a mild soap and water solution.

DO NOT USE OVEN CLEANER on this machine. Caustic cleaners can cause damage to the machine.

Never steam clean or get excess water in the interior of the cabinet as this can damage unit.

Always wear appropriate personal protection equipment during the cleaning process to guard against possible injury from hot cleaning solution.

1. Turn off all switches and controls.
2. Let the oven cool until it is warm, but not hot enough to burn you.
3. Pull grease drawer out of oven and empty it's contents.
4. Clean grease drawer and tray area with hot soapy water.
5. Remove all food products from the unit. Remove V-spits, meat forks and hanging baskets from the unit and place them in a large sink to soak in hot cleaning solution (**BKI Cleaner**).

6. Remove the Rotor System as described below:
 - Lift the washer from the groove and slide down the shaft.
 - Slide collar down the shaft.
 - Remove the inner shaft. **NOTE:** The welded bead in the center of shaft denotes the shaft removal direction.
 - Remove rotors.
7. Place the Rotor System components in a large sink to soak in hot cleaning solution. Clean the rotors with warm water, a sponge and **BKI** Cleaner. Wipe dry with a clean cloth.
8. Remove the circulation bottom as described below:
 - Remove the intake cover.
 - Unscrew all 6 wingnuts. Allow the circulation bottom to drop down.
 - Pull unit toward you until the pins are released.
9. Place the circulation bottom in a large sink and clean with hot soapy water.
10. Clean the top of oven. Carefully clean around fan blades and surrounding areas.
11. Clean the outside and inside of the rotisserie oven with warm water, a sponge and an approved cleaner which is authorized for use on food surface areas.
12. Reassemble the oven.

Troubleshooting

Refer to the table below for troubleshooting information. Additional troubleshooting information can be found on our website at <http://www.bkideas.com/>.

Problem	Cause	Possible Solution
Unit will not turn on.	Power to unit is not on. Problem with building power panel, circuit breaker or fuse.	Check circuit breaker or fuses at building power panel. If problem persists, contact an authorized BKI service agent for corrective action.
	Blown fuse.	Contact an authorized BKI service agent for corrective action.
	Hi-Limit is tripped.	Contact an authorized BKI service agent for corrective action.
	Defective Hi-Limit switch.	Contact an authorized BKI service agent for corrective action.
Not rotating.	Motor circuit breaker tripped.	Contact an authorized BKI service agent for corrective action.
Rotor switch not functioning.	Defective switch.	Contact an authorized BKI service agent for corrective action.
	Capacitor not functioning.	Contact an authorized BKI service agent for corrective action.

Problem	Cause	Possible Solution
Oven does not heat at all.	Improper parameter settings.	Check parameter settings.
	Improper program settings.	Check program settings.
	Hi-Limit is tripped.	Contact an authorized BKI service agent for corrective action.
	Loose wire on heater circuit.	Contact an authorized BKI service agent for corrective action.
	Defective relay.	Contact an authorized BKI service agent for corrective action.
	Defective contactor.	Contact an authorized BKI service agent for corrective action.
	Heating elements not functioning.	Contact an authorized BKI service agent for corrective action.
Oven heats up slowly.	Improper line voltage.	Check incoming voltage. If problem persists, contact an authorized BKI service agent for corrective action.
	Heating elements not functioning.	Contact an authorized BKI service agent for corrective action.
Oven does not heat and blower fan does not function.	Circulation bottom is not installed or microswitch is defective or Hi-Limit is tripped.	Install the Circulation bottom if necessary. For defective microswitch or HI-Limit trip contact an authorized BKI service agent for corrective action.
Control displays "F1".	Thermocouple connection is loose or thermocouple defective.	Contact an authorized BKI service agent for corrective action.
Blower fan not functioning	Defective motor.	Contact an authorized BKI service agent for corrective action.
Controller displays faulty temperature readings above 400 degrees.	Defective controller, Defective heating elements or Defective thermocouple.	Contact an authorized BKI service agent for corrective action.

Notes

Notes

Notes



P.O. Box 80400, Simpsonville, S.C. 29680-0400, USA
<http://www.bkideas.com>

Made and printed in the U.S.A
LI0177/1003