



precisely.

Serial #: _____



Instruction Manual for Globe Portion Control Scale Model GPS15

For Service on Your Scale

1. Visit our website at www.globeslicers.com (select Service button)
2. Or...Call Globe service department at 937-297-7247 and ask for the contact information for your local service company

Visit our website for information on additional products available from Globe.

www.globeslicers.com

Slicers, Mixers, Vegetable Cutters, Meat Choppers, and Scales

- IMPORTANT SAFETY NOTICE -

This manual contains important safety instructions which must be strictly followed when using this equipment.

Index

SAFETY TIPS	4
SCALE COMPONENTS	5
INSTALLATION	6
OPERATING INSTRUCTIONS	6
CLEANING INSTRUCTIONS	7
WARRANTY	7



GLOBE FOOD EQUIPMENT CO.
P.O. BOX 3209
DAYTON, OH 45401
PHONE: 937-299-5493
FAX: 937-299-4147
E-MAIL: globeinfo@globeslicers.com
WEBSITE: www.globeslicers.com

© Globe Food Equipment Company, 2006

Printed in USA

Safety Tips

This manual contains a number of precautions to follow in order to help promote safe use of this equipment.

Warnings affecting your personal safety are indicated by:



Warnings related to possible damage to the equipment are indicated by:



To ensure proper and safe operation, the general safety tips below must be followed.


- Always operate the scale on a level surface.
- Do not allow any liquids to come into contact with the scale.
- Do not drop or apply a strong shock to the scale.
- Do not use your scale in abnormal conditions.
If smoke, an odor, or any other abnormality is detected from the scale, immediately disconnect the power supply cable plug from the outlet and contact the Globe factory for repair. Continued use of scale under such abnormal conditions may cause a fire or electric shock. For your personal safety, never repair the scale by yourself.
- Do not leave any items on the weighing platter. This can damage the measuring equipment.
- Do not peel off the seal affixed to the scale body.



Risk of Electrical Shock

- Do not disassemble the scale.
- Do not insert or remove the plug in or out of the outlet with wet fingers.
- Do not make repairs to the electrical plug or power cable. Replace damaged power cable immediately.
- Do not pull or break power cable.
- Always operate the scale with the same rated AC power supply shown on the data plate.

Scale Components

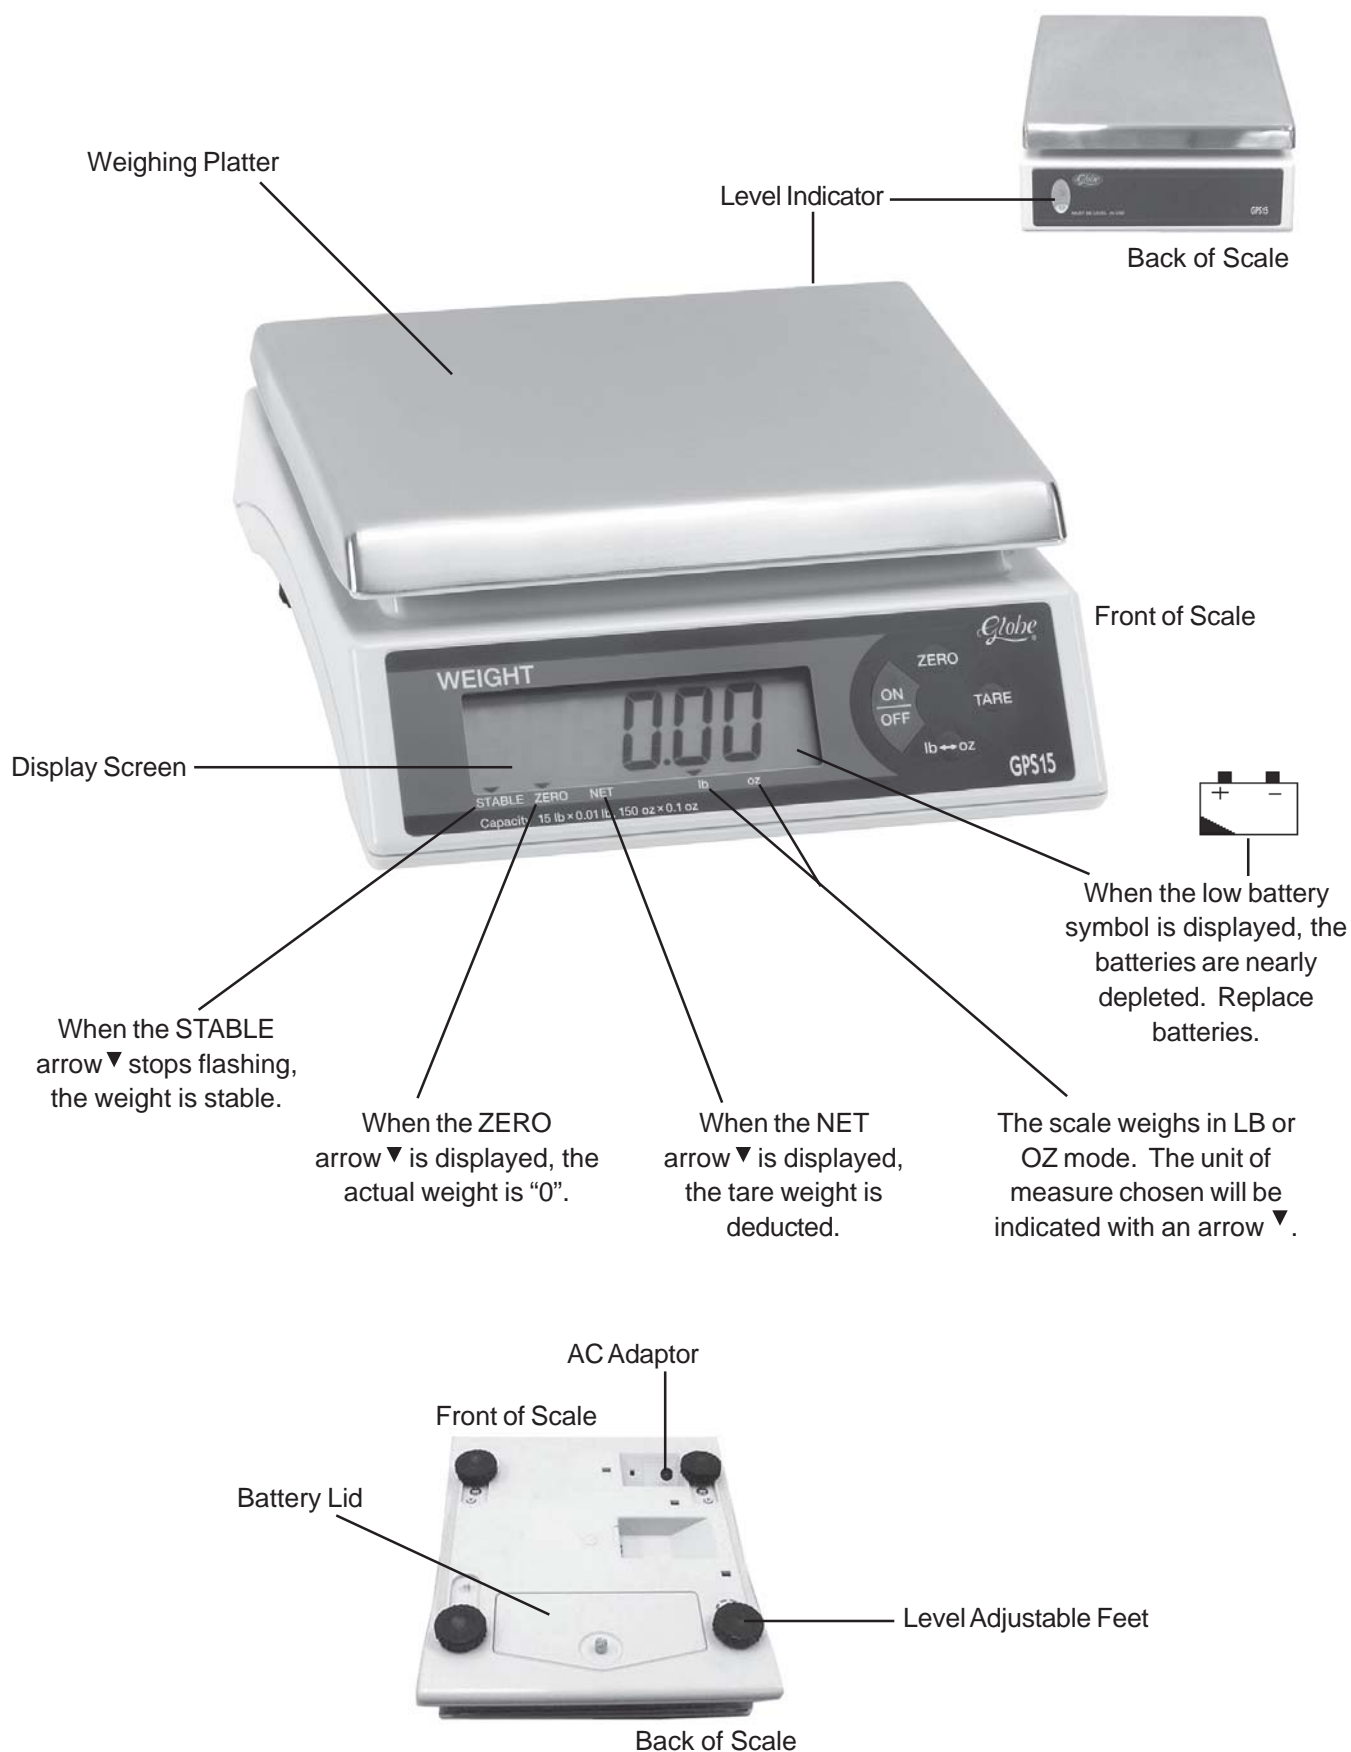

Installation

Avoid locating the scale in the following places:

1. A place of low temperature, high temperature or high humidity.
2. A place frequently exposed to vibration (e.g., on an unstable floor or table).

The following describes the procedure for preparing the scale before operation.

1. Power to the Unit
 - a. Install Batteries – Open the lid on the bottom of the scale and install two D-batteries (**NOTE:** Batteries are not included with the scale.)
 - b. Or connect the AC Adaptor to the receptacle located on the bottom front of the scale and plug into an electrical outlet.
2. Stainless Steel Weighing Platter - Place the stainless steel weighing platter over the top portion of the scale.
3. Level the Scale – Adjust the feet until the air bubble (located on the back of the scale) inside the level remains at the center of the circle (looking down on it).

Operating Instructions

1. Turning the unit on.
 - a. With nothing placed on the weighing platter, press the red **ON/OFF** key.
 - b. **NOTE:** Make sure the display shows all "0"s. If no arrow ▼ is illuminated above **ZERO** on the display screen, press the blue **ZERO** key.
2. The scale weighs in either pound (lb) or ounce (oz) mode.
 - a. To switch between weighing modes, press the blue **lb↔oz** key.
 - b. An arrow ▼ illuminated above either **lb** or **oz** on the display screen indicates the unit of measure selected.
 - c. **NOTE:** The unit of measure cannot be changed while weighing product. To change the unit of measure, remove the product from the weighing platter and press the blue **TARE** key and then the blue **ZERO** key. Then select the preferred weighing mode by pressing the blue **lb↔oz** key.
3. The scale can weigh in Gross or Net modes.
 - a. If Net weighing is needed, place the empty container (or tare weight) on the weighing platter and press the blue **TARE** key.
 - b. The display will show zeros and an arrow ▼ will be illuminated above **NET**.
 - c. When the empty container is removed from the weighing platter, the tare weight is shown as a negative amount and is indicated by a minus sign on the far left of the display.
 - d. **NOTE:** When no tare weight is used, you are in the Gross weighing mode and there will be no arrow above **NET**.
4. Weighing Product
 - a. Place the product (including container if tare weight is being used) on the stainless steel weighing platter.
 - b. When the **STABLE** arrow ▼ is illuminated and stops flashing, the actual total weight is displayed.
 - c. Remove the first product and continuing weighing the next item.
 - d. If the tare weight needs to be changed for a new product, then press the blue **TARE** key again to set it to zero and repeat the steps above for Net weighing.
5. Turning the scale off.
 - a. Press the red **ON/OFF** key for a couple of seconds
 - b. **NOTE:** The scale will automatically shut-off after 5 minutes of no activity whether it is operating on battery or AC power.

Cleaning Instructions

NEVER place scale in sink or dishwasher.



DO NOT hose down or pressure wash any part of the scale.

Excess moisture will damage scale and void warranty.

1. If the scale is running on AC power, unplug the scale.
2. Remove the stainless steel platter and wash with warm soapy water.
3. Soak a clean cloth in a mild detergent and warm water solution. Ring out excess water from cloth. Clean and wipe down the entire scale. Use a mild, non-bleach, non-chlorine sanitizer if required. **Dilute sanitizer per supplier's instruction!**

Limited Scale Warranty

Globe Food Equipment Company ("GFE") warrants to the original purchaser of new equipment that said equipment, when installed in accordance with our instructions within the United States and subject to normal use, is free from defects in material or workmanship for a period of one year (excludes wear/expendable parts) from purchase date. Contact factory for warranty procedures if scale failure occurs.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED. GFE EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTY OF MERCHANTABILITY OR EXPRESS OR IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

GFE'S OBLIGATION AND LIABILITY UNDER THIS WARRANTY IS EXPRESSLY LIMITED TO REPAIRING OR REPLACING EQUIPMENT WHICH PROVES TO BE DEFECTIVE IN MATERIAL OR WORKMANSHIP WITHIN THE APPLICABLE WARRANTY PERIOD. All repairs pursuant to this Warranty will be performed by an Authorized Designated GFE Service Location during normal working hours. IN NO EVENT SHALL GFE BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES TO BUYER OR ANY THIRD PARTY, INCLUDING, WITHOUT LIMITATION, LOSS OF PROPERTY, PERSONAL INJURY, LOSS OF BUSINESS OR PROFITS OR OTHER ECONOMIC LOSSES, OR STATUTORY OR EXEMPLARY DAMAGES, WHETHER IN NEGLIGENCE, WARRANTY, STRICT LIABILITY, OR OTHERWISE.

This warranty is given only to the first purchaser from a retail dealer. No warranty is given to subsequent transferees.

Periodic maintenance of equipment including but not limited to weight checks or recalibration, damage to load cell, lost parts, misuse and abuse, adjustments, water damage, improper installation, and normal wear are not covered under this warranty.

This warranty is not in force until such time as a properly completed and signed installation/warranty registration has been received by GFE within 30 days from the date of installation.

THE FOREGOING WARRANTY PROVISIONS ARE A COMPLETE AND EXCLUSIVE STATEMENT BETWEEN THE BUYER AND SELLER. GFE NEITHER ASSUMES NOR AUTHORIZES ANY PERSONS TO ASSUME FOR IT ANY OTHER OBLIGATION OR LIABILITY IN CONNECTION WITH SAID EQUIPMENT.

